



**ELEVATION** 

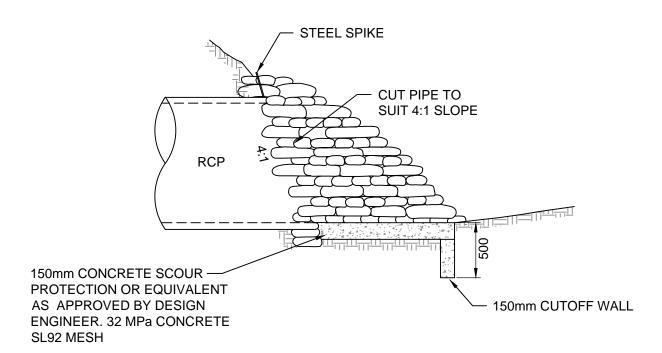

SECTIONAL ELEVATION

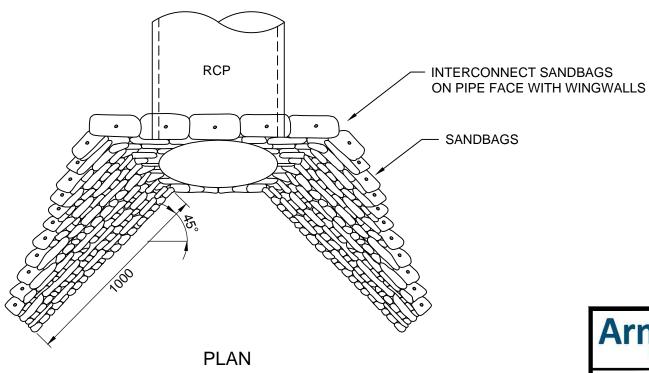

## **NOTES**

- 1. SANDBAG TO BE FILLED WITH CEMENT STABILIZED SAND OR 10mm DRY CONCRETE MIX TO A UNIFORM SIZE. PLACE DRY AND WET DOWN AFTER INSTALLATION AS LEVELS RISE. ALTERNATING LAYERS IN 90° ORIENTATION.
- 2. ALL BAG-ENDS TO BE TUCKED NEATLY OUT OF SIGHT.
- 3. SANDBAGS TO BE SPIKED IN LAYERS OF SIX.
- 4. FINAL SPIKES TO BE FLUSH WITH TOP OF WALL.
- 5. SPIKES TO BE Ø10mm PLAIN BAR.

